

# Bimetall-Thermometer: Messbereiche

## Standard-Ausführung, NG 63-80-100-125

# TB7

Teilung °C	
Anzeigebereiche	Messbereiche
-20...+40	-10...+30
0...+60	+10...+50
0...+100	+10...+90
0...+120	+20...+100
0...+160	+20...+140
0...+200	+20...+180
0...+300	+30...+270
0...+400	+50...+350
0...+500	+50...+450

°C-Teilung (außen)		°F-Teilung (innen)	
Anzeigebereiche	Messbereiche	Anzeigebereiche	Messbereiche
-20...+40	-10...+30	-4...+104	+14...+86
0...+60	+10...+50	+30...+140	+50...+122
0...+100	+10...+90	+32...+212	+50...+194
0...+120	+20...+100	+32...+250	+68...+212
0...+160	+20...+140	+32...+320	+68...+284
0...+200	+20...+180	+35...+400	+68...+356
0...+300	+30...+270	+35...+570	+86...+518
0...+400	+50...+350	+40...+750	+122...+662
0...+500	+50...+450	0...+930	+122...+842

## Ausführung komplett aus Edelstahl, NG 100-125-150

# TB8

Teilung °C	
Anzeigebereiche	Messbereiche
-50...+50	-40...+40
-30...+50	-20...+40
-20...+120	0...+100
-20...+80	-10...+70
-20...+40	-10...+30
0...+60	+10...+50
0...+80	+10...+70
0...+100	+10...+90
0...+120	+20...+100
0...+160	+20...+140
0...+200	+20...+180
0...+250	+30...+220
0...+300	+30...+270
0...+400	+50...+350
0...+500	+50...+450
0...+600	+100...+500
+50...+450	+100...+400
+100...+500	+150...+450

Teilung °F	
Anzeigebereiche	Messbereiche
-80...+120	-60...+100
-20...+120	0...+100
0...+200	+20...+180
0...+250	+30...+220
+50...+400	+100...+350
+50...+550	+100...+500
+200...+700	+250...+650
+100...+800	+200...+700
+200...+1000	+300...+900

°C-Teilung (außen)		°F-Teilung (innen)	
Anzeigebereiche	Messbereiche	Anzeigebereiche	Messbereiche
-50...+50	-40...+40	-60...+122	-40...+104
-30...+50	-20...+40	-22...+122	-4...+104
-20...+120	0...+100	-4...+250	+32...+212
0...+60	+10...+50	+30...+140	+50...+122
0...+100	+10...+90	+32...+212	+50...+194
0...+120	+20...+100	+32...+250	+68...+212
0...+160	+20...+140	+32...+320	+68...+284
0...+200	+20...+180	+35...+400	+68...+356
0...+300	+30...+270	+35...+570	+86...+518
0...+400	+50...+350	+40...+750	+122...+662
0...+500	+50...+450	0...+930	+122...+842
0...+600	+100...+500	0...+1110	+212...+932



ISO 9001 : 2015  
Cert. nr. 0433/6

# Edelgas-Thermometer: Messbereiche

## Ausführung komplett aus Edelstahl, NG 100-150

# TG8

RB1 - 10/08

Teilung °C	
Anzeigebereiche	Messbereiche
-200...+100	-170...+70
-200...+50	-170...+20
-120...+40	-100...+20
-80...+40	-60...+20
-50...+50	-40...+40
-40...+80	-30...+70
-40...+60	-30...+50
-40...+40	-30...+30
-30...+50	-20...+40
-20...+120	0...+100
-20...+80	-10...+70
-20...+60	-10...+50
-20...+40	-10...+30
0...+60	+10...+50
0...+80	+10...+70
0...+100	+10...+90
0...+120	+20...+100
0...+160	+20...+140
0...+200	+20...+180
0...+250	+30...+220
0...+300	+30...+270
0...+400	+50...+350
0...+500	+50...+450
0...+600	+100...+500
+50...+450	+100...+400
+100...+500	+150...+450

Teilung °F	
Anzeigebereiche	Messbereiche
-350...+200	-300...+150
-350...+100	-300...+50
-200...+100	-170...+70
-100...+100	-80...+80
-40...+180	-20...+160
-20...+120	0...+100
0...200	+20...+180
0...250	+30...+220
+50...+300	+70...+270
+50...+400	+100...+350
+50...+550	+100...+500
+100...+800	+200...+700
+200...+700	+250...+650
+200...+1000	+300...+900
+400...+1200	+500...+1100

°C-Teilung (außen)		°F-Teilung (innen)	
Anzeigebereiche	Messbereiche	Anzeigebereiche	Messbereiche
-40...+100	-20...+80	-40...+220	-4...+176
-40...+60	-30...+50	-40...+140	-22...+122
0...+60	+10...+50	+30...+140	+50...+122
0...+100	+10...+90	+32...+212	+50...+194
0...+120	+20...+100	+32...+250	+68...+212
0...+160	+20...+140	+32...+320	+68...+284
0...+200	+20...+180	+35...+400	+68...+356
0...+300	+30...+270	+35...+570	+86...+518
0...+400	+50...+350	+40...+750	+122...+662
0...+500	+50...+450	0...+930	+122...+842
+100...+500	+150...+450	+200...+930	+302...+842
0...+600	+100...+500	0...+1110	+212...+932
+200...+600	+250...+550	+400...+1110	+482...+1022

Copyright © NUOVA FIMA srl. Alle Rechte vorbehalten. Kein Teil dieser Publikation darf ohne vorherige Zustimmung durch Nuova Fima srl. in irgendeiner Form reproduziert werden.

